


Fuses and relays Chevrolet Aveo (T300), 2011 - 2015

 car-box.info/chevrolet/aveo/t300-2011-2015.html

Most of the electrical circuits of the American sedan are protected by fuses. Powerful consumers are connected via relays. Most of the protective elements are located in the mounting blocks located in the passenger compartment and under the hood.

The information on the diagrams is relevant for the Chevrolet Aveo 2nd generation (T300) 2011, 2012, 2013, 2014, 2015 model year.


In the engine compartment

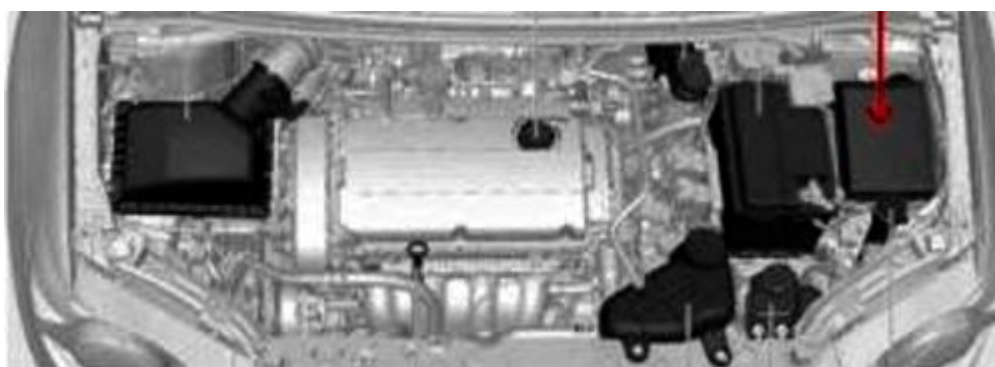

The mounting block is located on the left side of the engine compartment.

Diagram (Type 1)

Diagram (Type 1)

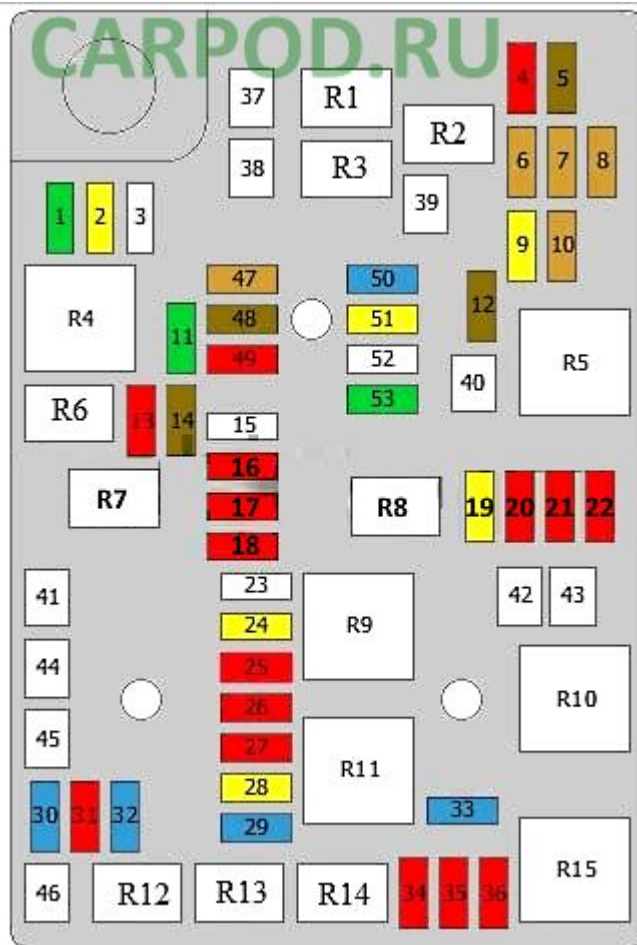

No. Relay assignment

R1 Wiper

R2 Not used

R3 Wiper motor

R4 Rear windshield defroster relay

R5 Ignition

R6 Not used

R7 Relay, auxiliary coolant pump

R8 Relay fuel pump Aveo

R9 Not used

R10 Cooling fan, high speed

R11 Ignition relay 2

Diagram (Type 1)

R12	Starter	
R13	A / C Compressor Clutch Relay	
R14	High beam headlamp	
R15	Cooling fan, low speed	
No.	Description of fuses	Amps
1	Electronic Brake Control Module (EBCM)	30
2	Sunroof	20
3	Not used	25
4	Not used	
5	Not used	
6	Not used	
7	Not used	
8	Body control unit	5
9	Rear wiper relay	20
	Or	
	Rear wiper relay and motor	
10	Battery gauge	5
11	Heated rear window	30
12	No	
13		
14	Mirror control unit	7.5
15	Seat heating control unit	25
16	<u>Fuel pump control unit</u>	10
17	Canister purge solenoid	10
18	Rear washer pump	10
	Windshield washer pump	
19	<u>Fuel module (fuel pump)</u>	20

Diagram (Type 1)


20	The engine control unit	10
21	Headlight adjustment actuators	10
	<u>Fuel pump control unit</u>	
22	Brake servo vacuum switch	10
	Automatic transmission automatic transmission	
	Ignition transformer	
23	No	
24	The engine control unit	20
25	Cooling fan, low speed relay	10
	Cooling fan, fast relay	
	A / C Compressor Clutch Relay	
	Relay, auxiliary coolant pump	
26	Air mass meter with air temperature sensor	10
	Thermostat heater	
27	Heated oxygen sensor 1	10
	Heated oxygen sensor 2	
28	The engine control unit	20
29	Injectors (cylinders 1 - 4)	15
	Ignition coil	
30	The engine control unit	10
31	A / C Compressor Clutch Relay	10
32	Transmission control unit	15
33	Signal	15
34	Front fog lights	10
35	Left high beam headlamp	10
36	High beam headlight, right	10
37	Wiper relay	30

Diagram (Type 1)

38	Electronic Brake Control Module (EBCM)	40
39	Fan motor relay	40
40	Dashboard	30
41	No	
42	Cooling fan, high speed	30
43	Cooling fan, low speed	40
44	No	
45		
46	Starter relay	25
47	Spare	5
48	Spare	7.5
49	Spare	10
50	Reserve	
51	Reserve	
52	Reserve	
53	Reserve	

Diagram (Type 2)

Diagram (Type 2)

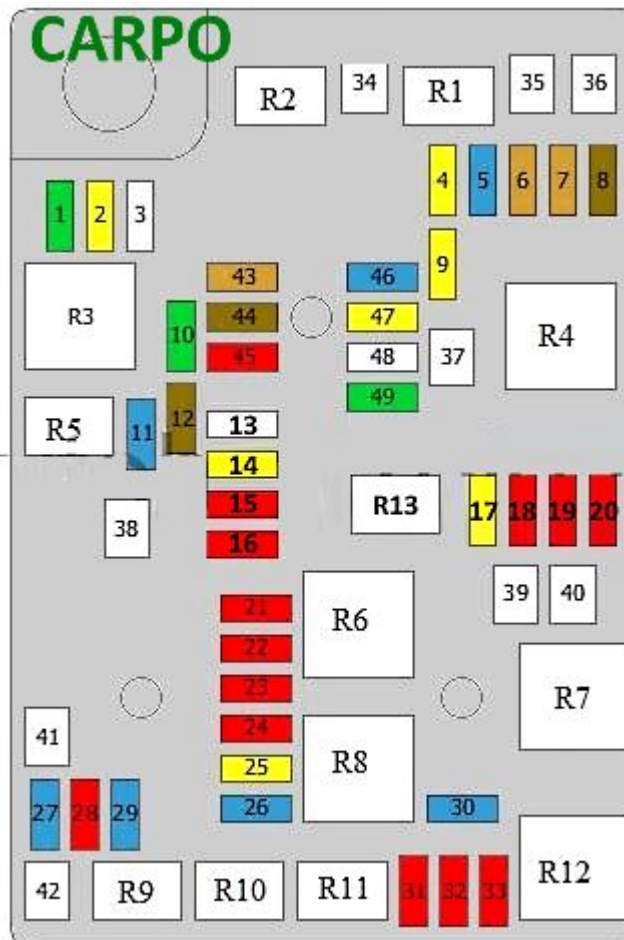

No.	Description	A
1	ABS / ESP system	30
2	Sunroof	20
3	-	
4	Rear window wiper motor	20
5	Multifunctional control unit	15
6	-	
7	-	
8	Power mirrors	7.5
9	-	
10	Heated rear window	30
11	-	

Diagram (Type 2)

12	Power mirrors	7.5 / 15
13	Seat heater	25
14	<u>Fuel pump control unit</u>	20
15	-	
16	Rear washer pump	10
	Windshield washer pump	10
17	Engine management, fuel pump relay	20
18	Electronic engine control module (ECM)	10
19	Fuel pump control unit	10
	Headlight adjustment actuators	
20	Fuel pressure sensor	10
	Automatic transmission	
	or not used	
21	Canister purge solenoid	10
	EGR valve	
	Intake manifold valve motor	
	Intake Manifold Adjustment Valve	
22	Ignition coil	10/20
	Ignition coils 1 - 4	
	Cooling fan, low speed relay	
	Cooling fan, fast relay	
	A / C Compressor Clutch Relay	
23	Air mass meter with air temperature sensor	10
	Thermostat heater	
	The engine control unit	
24	Heated oxygen sensor 1	10
	Heated oxygen sensor 2	

Diagram (Type 2)

	The engine control unit	
	Intake Manifold Adjustment Valve	
25	Electronic engine control module (ECM)	20
26	Engine management (injectors (cylinders 1 - 4))	15
27	Electronic engine control module (ECM)	15
28	Air conditioner / heater	10
29	Automatic transmission	15
	Air vent solenoid	
	or not	
30	Sound signal	15
31	Fog lights	10
32	High beam left headlight	10
33	High beam, right headlight	10
34	ABS / ESP system	40
35	Windshield wiper	30
36	Cooling fan motor	40
37	Passenger compartment fuse / relay box	30
38	-	
39	Cooling fan motor	40
40		30
41	ABS / ESP system	30
42	Starter	25
43	Reserve	5
44	Reserve	
45	Reserve	10
46	Reserve	15
47	Reserve	20

Diagram (Type 2)

48	Reserve	25
49	Reserve	30
R1	Wiper relay	
R2	Wiper motor relay	
R3	Heated rear window relay	
R4	Relay for main ignition circuits	
R5	-	
R6	Fuel pump relay 1	
R7		
R8	Engine control relay	
R9	Starter relay	
R10	A / C compressor electromagnetic clutch relay	
R11	Headlamp high beam relay	
R12	Cooling fan, low speed	
R13	Fuel pump relay 2	


In the passenger compartment



The fuse box is located on the driver's side of the dashboard, behind a plastic cover.

Diagram

Diagram

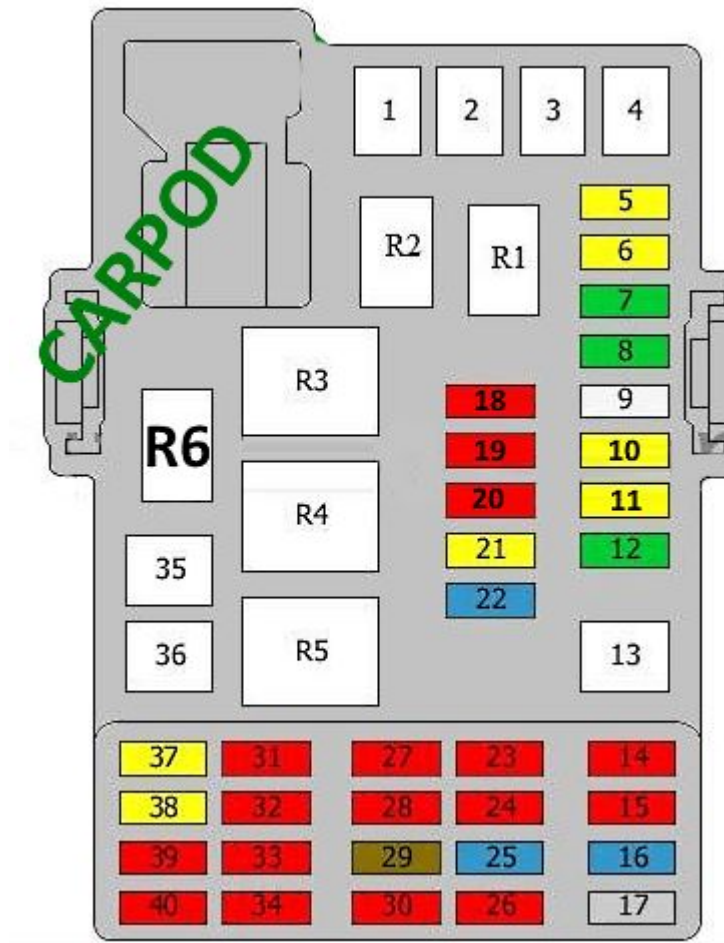

No.	Description	A
1	Fuel heater	40
2		60
3	-	
4	DC / DC converter control unit	30
5	Multifunctional body control module	20
6		20
7		30
8		30
9		25
10		20
11		20

Diagram

12		30
13	-	
14	Tailgate / tailgate opening drive	10
15	SRS system	10
16	Diagnostic connector	15
17	Egnition lock	2
18	Air conditioner electronic control unit	10
19	-	
20	Telematics	10
21	-	
22	Audio system	15
23	-	
24	Parking system control unit	10
25	-	
26	Instrument cluster	10
27	SRS system	10
28	Passenger airbag deactivation indicator	10
	Dashboard	
29	Clutch pedal limit switch (position sensor)	7.5
30	Headlights	10
31	-	
32	Air conditioner electronic control unit	10
33	-	
34	-	
35	Power windows (front)	25
36	Power windows (driver)	25
37	-	

Diagram

38	Cigarette lighter fuse Aveo 300	20
39	Sunroof	10
40	-	
R1	Logistic mode relay 1	
	or	
	not used	
R2	Signal relay	
	or	
	not used	
R3	Trunk / tailgate release relay	
R4	-	
R5	Heater blower motor relay	
R6	Bodywork relay	