

Fuses and relays Honda Civic (9, 2011 - 2015)

 car-box.info/honda/civic/9-2011-2015.html

This material discusses in detail the fuse diagrams of a Honda Civic car (ninth generation / factory index *FK2*, *FK3* / *FB2*): 2011, 2012, 2013, 2014, 2015 of release.



Fuses numbered 27 and 12 in the cabin block are responsible for protecting the electrical circuits of the cigarette lighters.


In the engine compartment



The fuse and relay box is located near the battery. To access it, you must remove the protective cover.

Diagram

Diagram

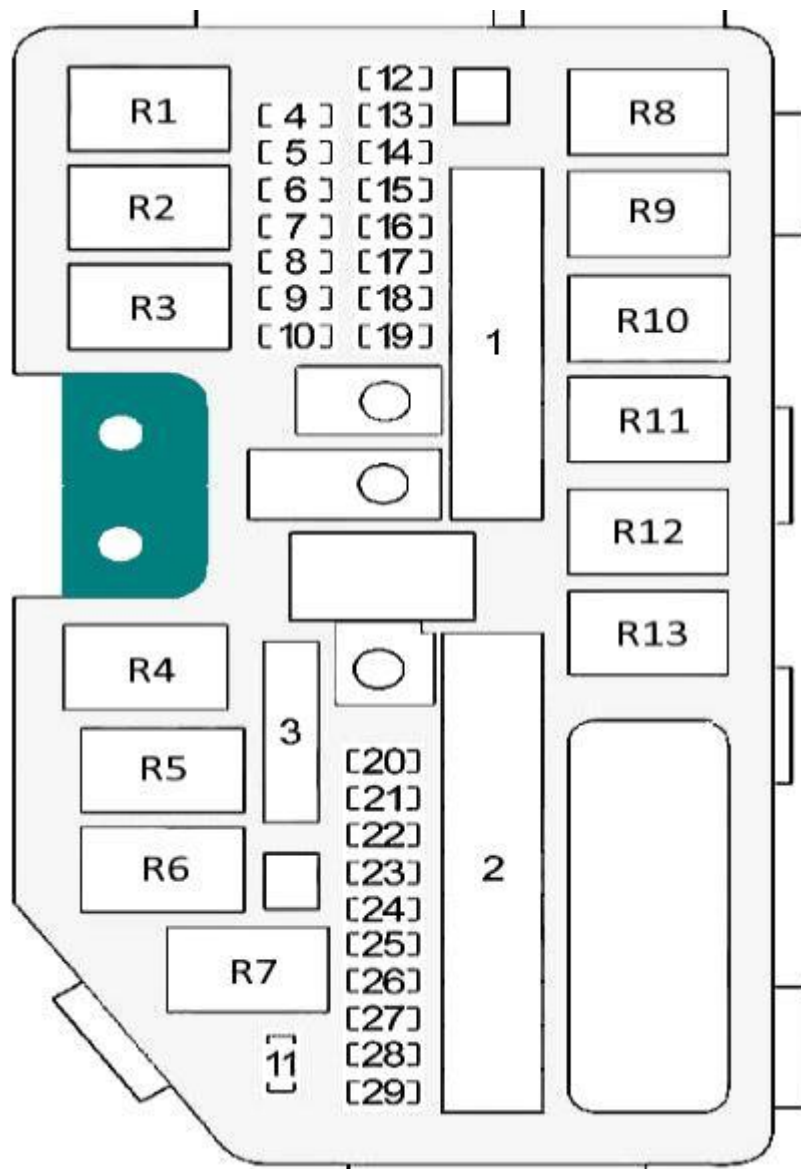

No.	Purpose	Amps
R1	Heater Fan Relay	-
R2	Starter relay #1	-
R3	Auxiliary fan relay	-
R4	Ignition coil relay	-
R5	Starter relay #2	-
R6	Injection relay	-
R7	Rear heater relay	-
R8	Fan speed relay (high / low)	-
R9	Main fan relay	-

Diagram

R10	Wiper relay	-
R11	A/C compressor clutch relay	-
R12	Front fog lamp relay	-
R13	Horn relay	-
1-1	EPS System (Power Steering)	70
1-2	ABS/VSA system	30
1-3	ABS/VSA FSR system	30
1-4	Wiper motor	30
1-5	Main fuse	100
2-1	IG main	30/50
2-2	Fuse box	60
2-3	Fuse box 2	60
2-4	Main headlight fuse	30
2-5	ST/MG switch	30
2-6	Rear heater	30
2-7	IG Main 2	30
2-8	Fan	40
2-9	Auxiliary fan motor	20
2-10	Main fan motor	20
3	Not involved	-
4	Left headlight (low beam)	15
5	7.5A ST DIAG/ ST MG	7.5
6	Right headlight (low beam)	15
7	Not involved	-
8	Not involved	-
9	Not involved	-
10	Not involved	-

Diagram

11	Oil level sensor	7.5
12	Fog lights	20
13	Power sliding driver's seat	20
14	Alarm	10
15	FI Sub (injection)	15
16	IG ignition coil	15
17	Stop signals	15
18	Sound signal	10
19	Trailer electrical equipment	20
20	Right low beam injector	15
21	IGP	15
22	DBW system	15
23	Left headlight (low beam)	15
24	Power driver's seat	20
25	Clutch	7.5
26	Washer	15
27	Marker lamps	20
28	Interior lamps	7.5
29	Reversing lamp	10


In the passenger compartment



The fuse box is located on the driver's side under the dashboard.

Diagram

Diagram

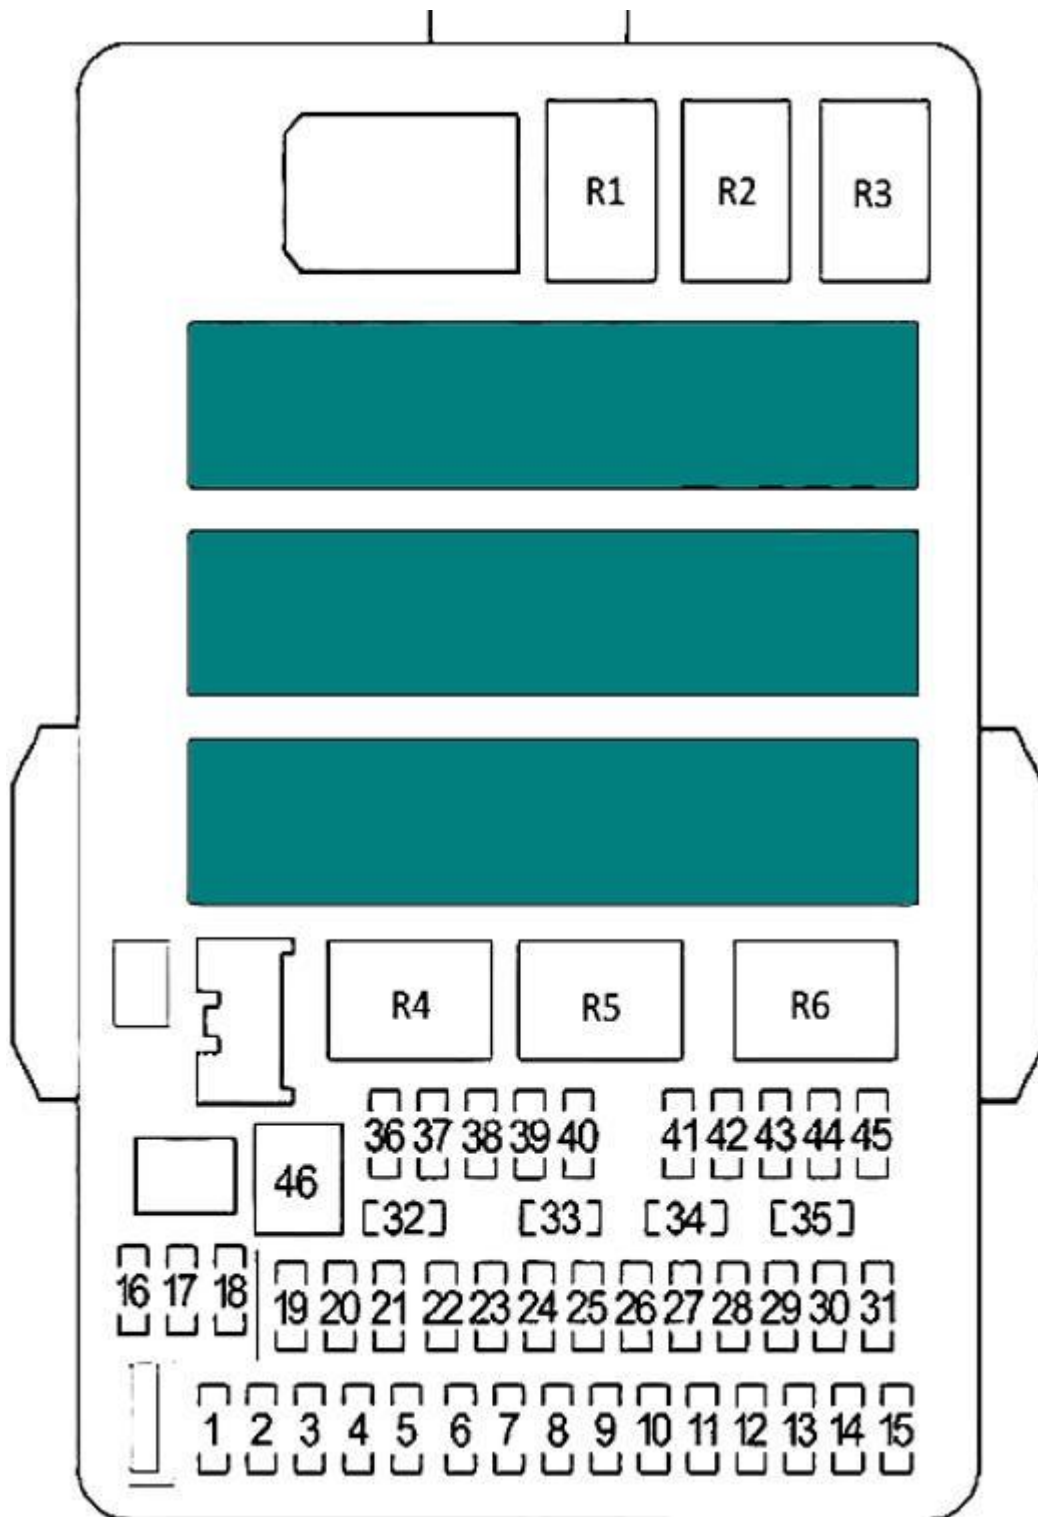

No.	Description	Amps
R1	Power window relay	-
R2	<u>Honda Civic Fuel Pump Relay.</u>	-
R3	Starter relay	-
R4	Not involved	-

Diagram

R5	Fuel injection relay	-
R6	Power window relay	-
1	HAC system (lifting assistance module)	20
2	ACG (ignition)	10
3	SRS system	10
4	<u>Fuel pump fuse Honda Civic 9</u>	15
5	Dashboard	7.5
6	Power windows	7.5
7	VB SQL	15
8	Door lock motor 2 (unlock)	15
9	Door lock motor 1 (unlock)	15
10	Daytime running lights (DRL)	10
11	Sunroof	20
12	<u>Cigarette lighter socket in center console</u>	15/20
13	Power seats	20
14	Seat heaters	15
15	Driver door lock motor (unlock)	10
16	Not involved	-
17	Not involved	-
18	Not involved	-
19	ACC	7.5
20	ACC key lock	7.5
21	Daytime running lights (DRL)	7.5
22	HAC system	7.5
23	HAC system	7.5
24	ABS / VSA system	7.5
25	ACC	7.5

Diagram

26	Not involved	-
27	<u>Front cigarette lighter socket Honda Civic 9</u>	15/20
28	washer	15
29	ODS	7.5
30	Driver's door lock motor (closing)	10
31	Smart	10
32	Door lock motor 2 (closing)	15
33	Door lock motor 1 (closing)	15
34	Side lamps	7.5
35	Interior lighting	7.5
36	Not involved	-
37	Power seats	20
38	High beam left headlight	10
39	High beam right headlight	10
40	Rear fog lamp	7.5
41	Central locking	20
42	Window regulator driver's door	20
43	Power window on the rear passenger side	20
44	Window regulator on the front passenger side	20
45	Rear power window, driver's side	20
46	Wiper	30
-	STS system	7.5