

Fuses and relays Chevrolet TrailBlazer (GMT360), 2001 - 2010

 car-box.info/chevrolet/blazer/trailblazer-gmt360-2001-2010.html

The Chevrolet TrailBlazer is a mid-size five-door SUV. Produced in 2001, 2002, 2003, 2004, 2005, 2006, 2007, 2008 and 2009, 2010.

In this publication, we will show the location of the first generation Chevrolet TrailBlazer GMT360 (Buick Rainier (2004-2007); GMC Envoy (2002-2009); Saab 9-7X (2004-2009); Isuzu Ascender (2002-2008); Oldsmobile Bravada (2002-2004)), fuse and relay blocks with a description of the circuits and photo examples of blocks.


In the engine compartment



In the engine compartment, this unit is located on the driver's side. Remove the cover to access the unit.

Diagram

Diagram

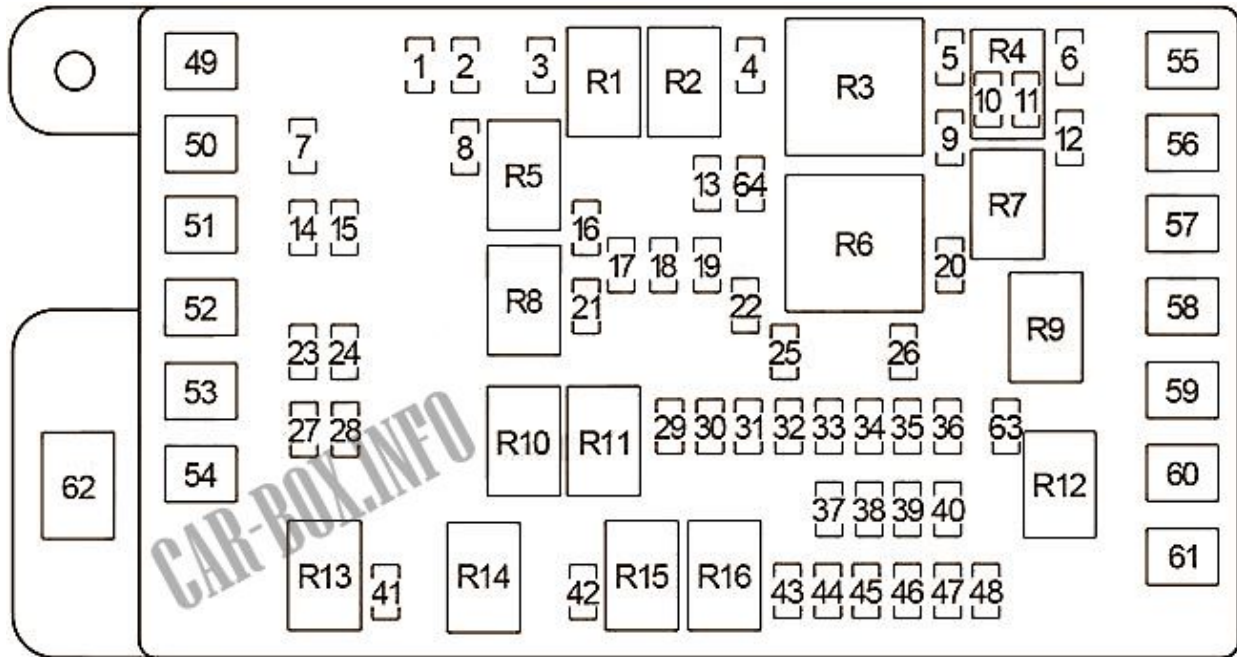

No	Description	Amps
1	Evaporative Emission (EVAP) Canister Vent Solenoid, Transmission Control Module (TCM)	10
2	2005-2009 (5.3L, 6.0L): Body Control Module (BCM), Theft Deterrent Alarm, Theft Deterrent Control Module	10
3	Windshield Washer Fluid Pump	15
4	High Beam Headlamps, High Beam Relay	10
5	2005-2009 (5.3L, 6.0L): Heated Oxygen Sensor	10
6	4.2L: Air Conditioner Relay	10
	2005-2009 (5.3L, 6.0L): Heated Oxygen Sensor	10
7	-	-
8	2003: Transfer Case Shift Control Module, Transfer Case Encoder Motor	25
	2004-2009: Transfer Case Encoder Motor, Transfer Case Shift Control Module	30
9	2005-2009 (5.3L, 6.0L): Fuel Injectors, Ignition Coils (Right Side)	20
	2003-2004 (5.3L): Fuel Injectors, Ignition Coils (Right Side)	15
	2006-2009 (4.2L): Heated Oxygen Sensor	10
10	2003-2004 (5.3L): Fuel Injectors, Ignition Coils (Left Side)	15

Diagram

	Evaporative Emission (EVAP) Canister Purge Solenoid, Mass Air Flow (MAF)/Intake Air Temperature (IAT) Sensor, Valve Lifter Oil Manifold (VLOM) Assembly	15
11	5.3L, 6.0L: Throttle Actuator Control (TAC) Module - Powertrain Control Module (PCM) / Engine Control Module (ECM)	15
12	2003-2004: Body Control Module (BCM), Theft Deterrent Alarm, Theft Deterrent Control Module	10
	2005-2009 (5.3L, 6.0L): Fuel Injectors, Ignition Coils (Left Side)	20
	2005-2009 (4.2L): Body Control Module (BCM), Theft Deterrent Alarm, Theft Deterrent Control Module	10
13	Trailer Connector (Right Turn Signal)	10
14	Automatic Level Control Compressor	30
15	Trailer Connector (Back-Up Lamps)	10
16	Trailer Connector (Left Turn Signal)	10
17	Saab: Ignition Switch	5
18	Stoplamp Switch	25
19	Cigar Lighter, Data Link Connector (DLC)	20
20	5.3L, 6.0L: Air Conditioner Relay	10
21	Fuel Pump Relay, Powertrain Control Module (PCM)	20
22	Electronic Adjustable Pedals (EAP) Relay	15
23	Right High-Beam Headlamp	10
24	Left High-Beam Headlamp	10
25	Powertrain Control Module (PCM) / Engine Control Module (ECM)	10
26	Stop Lamp Switch, A/T Shift Lock Actuator	10
27	Right Low-Beam Headlamp	10
28	Left Low-Beam Headlamp	10
29	Headlamp Driver Module (HDM) Relay	15
30	Turn Signal/Hazard Flasher Module	25
31	Body Control Module (BCM)	10

Diagram

32	Inflatable Restraint Front Passenger Pressure System (PPS) Module, Inflatable Restraint Sensing and Diagnostic Module (SDM), Rollover Sensor	10
33	2003-2008: Engine Cooling Fan (Fan Driver Module)	10
34	Ignition Relay No.1, Air Conditioner Relay, Park/Neutral Position (PNP) Switch, Headlamp Leveling Actuators, Inverting Driver Module, Stop Lamp Switch, Traction Control Switch, Headlamp Leveling Switch, Instrument Panel Cluster, Turn Signal/Multifunction Switch, Inside Rearview Mirror	10
35	2003: EVAP Canister Purge Solenoid, EVAP Canister Vent Solenoid	10
	2004-2009: Electronic Adjustable Pedals (EAP) Relay, Back-Up Lamps (Park/Neutral Position (PNP) Switch)	15
36	4.2L: Powertrain Control Module (PCM) / Engine Control Module (ECM), Fuel Injectors, Ignition Coils	15
	5.3L, 6.0L: Engine Control Module (ECM)	15
37	2004-2008 (4.2L): Secondary Air Injection (AIR) Pump Relay, Secondary Air Injection (AIR) Pump, Secondary Air Injection (AIR) Solenoid	15
38	4.2L: Powertrain Control Module (PCM), Throttle Actuator Control (TAC) Module	10
	2003-2004 (5.3L): Heated Oxygen Sensors	15
	2009: Secondary Air Injection (AIR) Pump Relay	15
39	2003: Back-Up Lamps (Park/Neutral Position (PNP) Switch)	15
	2004-2005: EVAP Canister Purge Solenoid, EVAP Canister Vent Solenoid	10
40	2003-2005 (4.2L): Heated Oxygen Sensors	10
	2003-2004 (5.3L): Heated Oxygen Sensors	15
	2005-2009 (5.3L, 6.0L): 1-2 Shift Solenoid (1-2 SS) Valve, 2-3 Shift Solenoid (2-3 SS) Valve, 3-2 Shift Solenoid (2-3 SS) Valve, Torque Converter Clutch (TCC) Solenoid Valve, Torque Converter Clutch Pulse Width Modulation (TCC PWM) Solenoid Valve, Transmission Control Module (TCM)	15
41	Headlamp Washer Relay, Rear Window Wiper Motor Relay	20
42	Front Fog Lamp Relay	15
43	Trailer Brake Wiring	30

Diagram

44	Horn Relay	15
45	Instrument Panel Cluster (IPC)	10
46	2005-2009 (5.3L, 6.0L): Engine Control Module (ECM)	10
47	2005-2009: Regulated Voltage Control	15
48	2009: Engine Control Module (ECM)	15
49	Trailer Connector	30
50	ABS - Electronic Brake Control Module (EBCM)	60
51	4.2L: Secondary Air Injection (AIR) Pump Relay	60
52	2006-2009: Vehicle Stability Enhancement System (VSES) - Electronic Brake Control Module (EBCM)	60
53	-	-
54	-	-
55	2006-2009: Blower Motor Control Module, Blower Motor Resistor Assembly	40
56	Starter Relay, Ignition Switch	40
57	-	-
58	2003-2005: Blower Motor Resistor Assembly (HVAC Manual), Blower Motor Control Processor (HVAC Auto)	40
59	Ignition Switch	40
60	-	-
61	-	-
62	Fuse Block (Passenger Compartment)	125
63	2009: Evaporative Emission (EVAP) Canister Purge Solenoid, Mass Air Flow (MAF)/Intake Air Temperature (IAT) Sensor, Valve Lifter Oil Manifold (VLOM) Assembly	15
64	2009 (Saab): Evaporative Emission (EVAP) Canister Purge Solenoid, Mass Air Flow (MAF)/Intake Air Temperature (IAT) Sensor	15
Relay modules		
R1	Windshield Washer Fluid Pump	
R2	High Beam Headlamps	

Diagram


R3	2003-2004 (5.3L): Ignition (Fuse: "5", "10", "11") 2005-2009: Powertrain Control Module (PCM) / Engine Control Module (ECM)
R4	4.2L: Air Conditioner 2009: Secondary Air Injection (AIR) Pump
R5	-
R6	Starter
R7	5.3L, 6.0L: Air Conditioner
R8	Fuel Pump relay
R9	Electronic Adjustable Pedals (EAP)
R10	Engine Cooling Fan
R11	Headlamp Driver Module (Low Beam Headlamps)
R12	-
R13	Headlamp Washer System
R14	Rear Window Washer Fluid Pump
R15	Front Fog Lamp
R16	Horn

In the passenger compartment



Fuse box located under the rear seat. Pull the cushion forward to access the fuse block.

Diagram

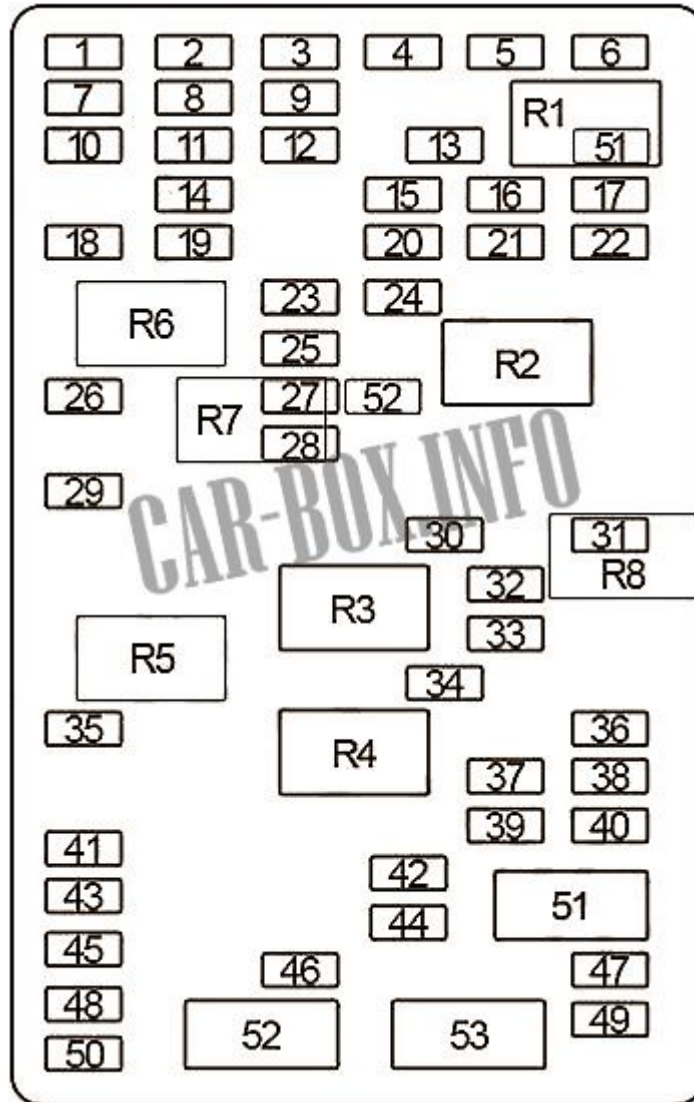

No	Description	Amps
1	-	-
2	-	-
3	-	-
4	-	-
5	-	-
6	-	-
7	except Saab: Body Control Module (BCM)	3
	Saab: Body Control Module (BCM)	10
8	Electronic Brake Control Module (EBCM)	10

Diagram

9	except Saab: Body Control Module (BCM)	3
	Saab: Park/Turn Signal Lamp - LF	10
10	Saab: Body Control Module (BCM)	3
11	Transfer Case Shift Control Switch, Automatic Level Control (ALC) Compressor, Front Axle Actuator	15
12	Transmission, Automatic Transmission Shift Lock Actuator, Engine Control Module (ECM), Powertrain Control Module (PCM), Theft Deterrent Control Module, 1-2 Shift Solenoid (1-2 SS) Valve, 2-3 Shift Solenoid (2-3 SS) Valve, 3-2 Shift Solenoid (3-2 SS) Valve, Torque Converter Clutch (TCC) Solenoid Valve	10
13	except Saab: Auxiliary Power Outlet (Front), Auxiliary Power Outlet (Console), Auxiliary Power Outlet (Rear (2005-2009))	20
14	except Saab: HVAC Control Module	30
15	Instrument Panel Cluster, Front Passenger Door Module (FPDM), Tail Lamp Assembly (Right), Marker Lamp (Right), Park/Turn Signal Lamp	10
16	Trailer Connector (Park Lamps)	10
17	Radio, Digital Radio Receiver	15
18	except Saab: Body Control Module (BCM)	10
	Saab: Park/Turn Signal Lamp - RF	10
19	HVAC Control Module, Turn Signal/Multifunction Switch, Air Temperature Actuators, Defrost Actuator, Recirculation Actuator, Mode Actuator, Console Mode Actuator, Traction Control Switch, Electronic Brake Control Module (EBCM),HVAC Control Module (Auxiliary), Steering Wheel Speed/Position Sensor	10
20	Instrument Panel Cluster, Driver Door Module (DDM), Tail Lamp Assembly (Left), Marker Lamp (Left), Park/Turn Signal Lamp	10
21	Turn Signal/Multifunction Switch, Marker Lamps, Front Park and Turn Signal	10
22	HVAC Control Module, HVAC Control Module (Auxiliary)	10
23	Transmission Control Module (TCM)	10
24	Tail Lamps, Powertrain Control Module (PCM), Throttle Actuator Control (TAC), Module Engine Control Module (ECM), Trailer Brake Wiring, Transmission Control Module (TCM)	15
25	Windshield Wiper Motor	25
26	2003-2006 (except Saab): Body Control Module (BCM)	10

Diagram

	2006-2009 (except Saab): Sunroof Motor	20
	Saab: Body Control Module (BCM)	10
27	except Saab: Body Control Module (BCM)	3
28	2003-2006 (except Saab): Outside Moisture Sensor, Digital Video Disc (DVD) Player	10
29	Saab: Sunroof Motor	20
30	Garage Door Opener, Voice Recorder, Digital Video Disc (DVD) Player, Vehicle Communication Interface Module (CIM)	10
31	EXT (2003-2006): Sunroof Module	20
32	-	-
33	-	-
34	Power Door Lock ("LOCK" Relay and "UNLOCK" Relay)	10
35	2003-2006 (except Saab): Sunroof Module	20
	EXT (2003-2006): Quarter Glass Switches and Actuators, Sunroof Module	20
36	2005-2009: Cobra Intrusion Sensor Module, Inclination Sensor, Liftgate Module (LGM), Memory Seat Module - Driver	10
37	Right Tail Lamp Assembly, Clearance Lamps	10
38	Center High-Mounted Stop Lamp (CHMSL)	10
39	License Lamps and Left Tail Lamp	10
40	2003-2006 (except Saab): Blower Motor (Auxiliary), Blower Motor Control Processor (Auxiliary)	30
41	2003-2004 (except Saab): Auxiliary Power Outlet (Rear)	20
42	Audio Amplifier	20
43	Front Passenger Door Module (FPDM)	10
44	Rear Window Wiper Motor	15
45	Driver Door Module (DDM)	10
46	2003-2004 (except Saab): Memory Seat Module (Driver), Memory Seat Module (Front Passenger), Cobra Intrusion Sensor and Inclination Sensor	10
47	Rear Fog Lamp	10

Diagram

48	Body Control Module (BCM)	10
49	Liftgate Module	30
50	Body Control Module (BCM)	10
51	Saab: Auxiliary Power Outlet - Front/Rear	20
52	Saab: Body Control Module (BCM)	2

Circuit Breakers

51	Power Seat, Memory Seat Module (Driver), Memory Seat Module (Front Passenger)	30
52	Power Window (Driver Door Module (DDM), Left Rear Window Switch)	25
53	Power Window (Front Passenger Door Module (FPDM), Right Rear Window Switch)	25

Relays

R1	except Saab: Rear Fog Lamp
R2	Park Lamps, Tail Lamps (Fuse: "16", "21", "37", "39")
R3	Power Door Unlock (Rear Door Lock Actuators)
R4	Power Door Lock (Rear Door Lock Actuators)
R5	EXT (2003-2006): Quarter Glass Switches and Actuators, Sunroof Module
R6	Saab: Ignition (Fuse: "8:", "11", "19")
R7	Saab: Accessory (Fuse: "25", "23")
R8	Saab: Ignition (Fuse: "12")