

Fuses and relays Lincoln MKT (mk1; 2013-2019)

 car-box.info/lincoln/mkt/mk1-2013-2019.html

In this article, we will take a detailed look at the fuse diagrams for the Lincoln MKT (first generation; restyling): 2013, 2014, 2015, 2016, 2017, 2018, 2019 release.




Fuses 27, 21, 20, 17 and 9 in the engine bay block are responsible for the cigarette lighter and the power outlets.

In the engine compartment



Located on the left side of the engine bay, under the cover.

Diagram

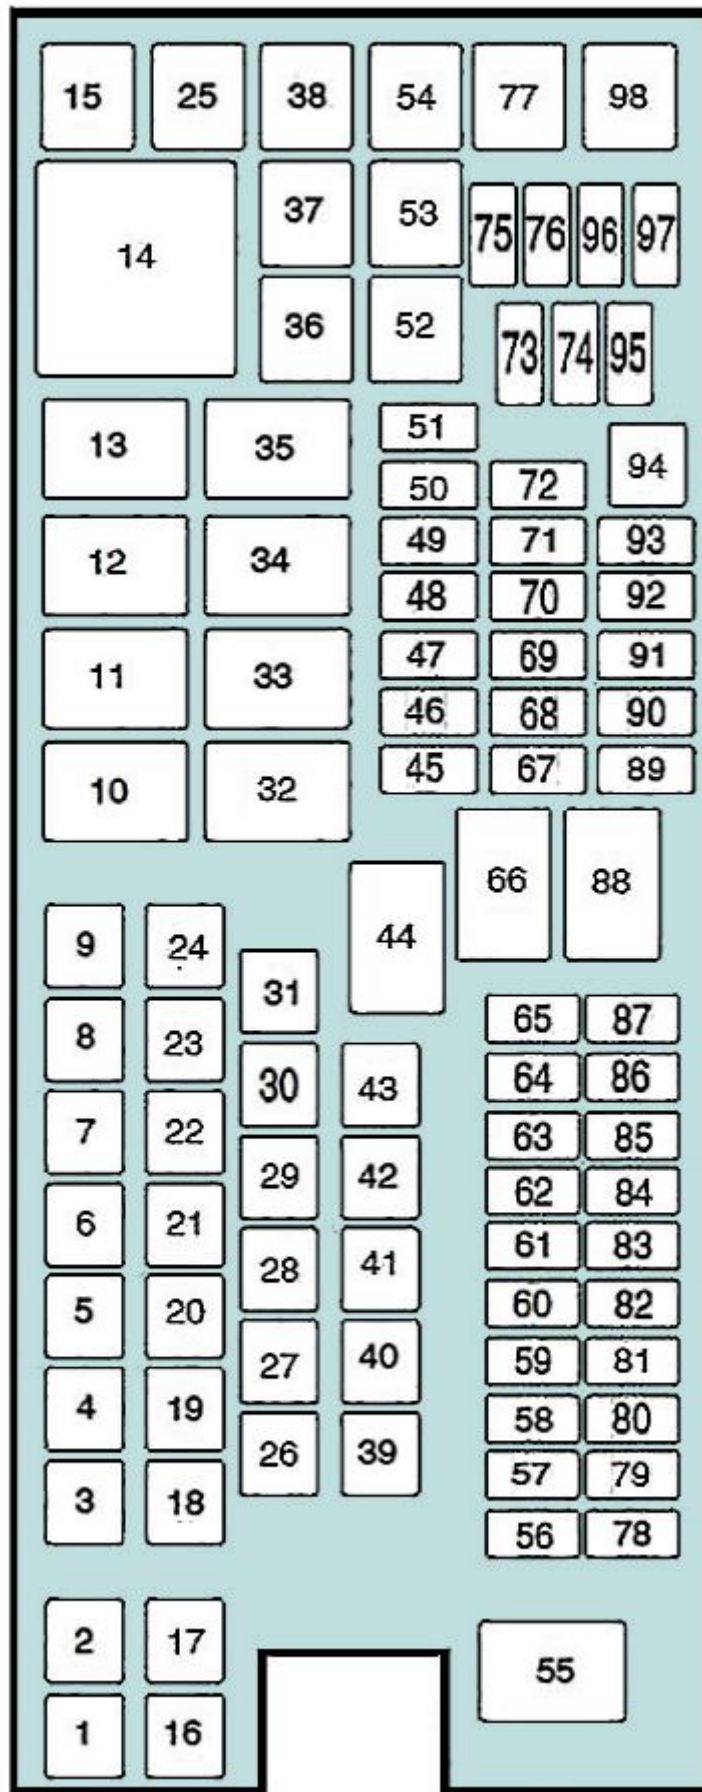

Diagram

No.	Description
10	3rd row power seats relay
11	Heated rear windowr elay
12	Trailer tow battery charge relay
13	Starter relay
14	Cooling fan #2 relay
15	Fuel pump relay
25	Empty
32	Auxiliary blower relay
33	Cooling fan #1 relay
34	Front blower relay
35	Cooling fan (series) relay
36	Empty
37	Trailer tow right-hand stop/turn lamps relay
38	Trailer tow reverse lamps relay
44	Windshield washer relay
52	Empty
53	Trailer tow left-hand stop/turn lamps relay
54	Empty
55	Wipers relay
66	Powertrain control module relay - vehicle power
77	Trailer tow park lamps relay
88	Run/start relay
98	A/C clutch relay
1	Fan relay 2 (40A)

Diagram

2	Fan relay 1 (40A)
3	Trailer brake control unit (30A)
4	Washer pump and Wipers (30A)
5	ABS pump (50A)
6	limousine/livery: B+ #1 access circuit (50A)
7	Power liftgate (30A)
8	Sunroof (20A)
9	2nd row console 12V power outlet (20A)
16	limousine/livery: B+ #2 access circuit (40A)
17	110V AC power outlet (30A)
18	Front blower motor (40A)
19	Starter (30A)
20	Inside bin power outlet (20A)
21	Dashboard 12V power outlet / Lincoln MKT cigarette lighter fuse (20A)
22	3rd row seat module (30A)
23	Memory module (30A)
24	non-Limousine/Livery: Trailer tow battery charge (30A) Limousine: Vacuum pump relay (40A)
26	Heated mirrors, Rear window defroster (40A)
27	Trunk power outlet (20A)
28	Climate controlled seats - Front (30A)
29	Climate controlled seats - Rear (30A)
30	Rear heated seats (20A)
31	fan relay 3 (25A)
39	Additional blower motor (30A)

Diagram

40	Left front power window (30A)
41	Left rear power window (30A)
42	Passenger power seat (30A)
43	ABS valves (20A)
45	Rain sensor (5A)
46	EcoBoost: Canister vent solenoid (5A)
47	Washer pump (15A)
48	Park lamps - Front (10A)
49	Empty
50	Heated mirrors (10A)
51	3.7L engine: PCM, Injector power monitor (5A)
56	Fuel pump fuse, Fuel injectors (30A)
57	Left HID headlamps (20A)
58	Alternator sensor (10A)
59	Brake on/off switch (10A)
60	Trailer tow back-up lamps (10A)
61	limousine/livery: B+ #6 access circuit (20A)
62	A/C clutch (10A)
63	Trailer tow stop/turn lamps (15A)
64	Rear wipers (15A)
65	limousine/livery: B+ #7 access circuit (20A)
67	Vehicle power #2 - Mass airflow sensor, Oxygen sensor heater, Canister vent solenoid, Variable camshaft timing solenoid, Canister purge solenoid (20A)
68	Vehicle power #4 - ignition coils (20A)
69	Vehicle power #1 - PCM (20A)

Diagram

70	Vehicle power #3 (coil) - Fan control relays, A/C clutch relay, Auxiliary transmission warmup, Variable air conditioning compressor, Electronic compressor bypass valve (for turbo charger), Turbo charge waste-gate control, All-wheel drive module, Positive crackcase ventilation heater (15A)
71	Empty
72	Limousine/livery run/accessory (5A)
73	Limousine/livery battery saver (5A)
74	Empty
75	Empty
76	Empty
78	Right HID headlamps (20A)
79	Adaptive cruise control system (10A)
80	limousine/livery: B+ #3 access circuit (30A)
81	limousine/livery: B+ #4 access circuit (15A)
82	Rear washer (15A)
83	Empty
84	Trailer tow park lamps (20A)
85	limousine/livery: B+ #5 access circuit (15A)
86	Powertrain control module relay, PCM Keep-alive power, Canister vent solenoid (3.7L engine) (5A)
87	Run/start (5A)
89	ABS module, Adaptive headlamps (10A)
90	PCM run/start (10A)
91	Adaptive cruise control system (10A)
92	Power steering module / Front blower relay coil (5A)
93	Rear defroster, Auxiliary blower, Battery charge / vacuum pump relays (5A)

Diagram

94 BCM run/start (30A)

95 Empty

96 Empty


97 Empty

In the passenger compartment



Located under the dashboard to the left of the steering wheel.

Diagram

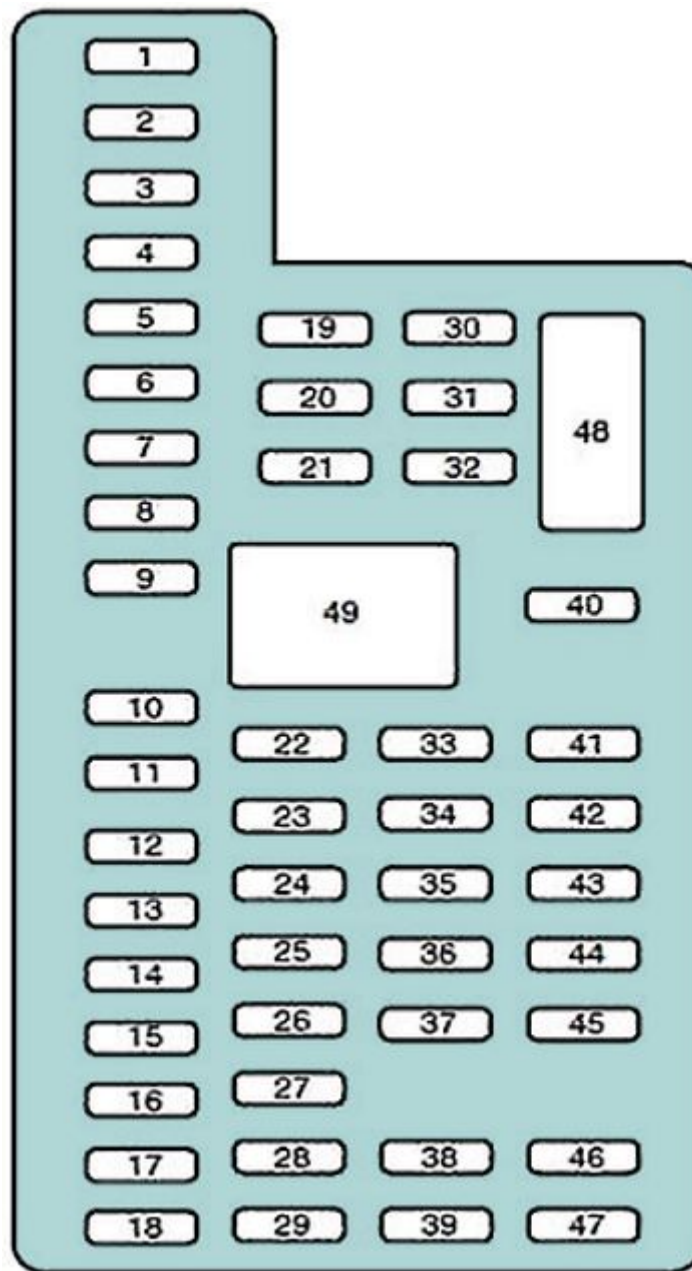

No.	Description	Amps
1	Rear window on the passenger side	30 A
2	Second row seats / Memory seat	15 A
3	Front window on the passenger side	30 A
4	Limousine battery saver / Battery saver relay (interior demand lamps and seat power)	10 A
5	<ul style="list-style-type: none"> Active noise control unit and Audio amp (from 2016-2019) 	20 A

Diagram

- Smart amp (up to 2015)

6	Rear seat entertainment module (livery only), Rear climate control, USB power socket	5 A
7	Driver seat module and door module, Keypad	7,5 A
8	Power liftgate	10 A
9	Electronic finish panel, SYNC®, Radio transceiver module	10 A
10	Front wiper motor relay, Run/accessory relay, Limousine run/accessory	10 A
11	Heads-up display / Intelligent access module	10 A
12	Puddle lamps, Interior lighting, Backlighting	15 A
13	Right rear stop/turn lamps / Right turn lamps / Right mirror turn signal	15 A
14	Left rear stop/turn lamps, Left turn lamps, Left mirror turn signal	15 A
15	Center high mounted stop lamp, Backup lamp	15 A
16	Right headlamps (Low beam)	10 A
17	Left headlamps (Low beam)	10 A
18	3rd row power seats, Keypad illumination, Start button run indicator, , Powertrain control module wake-up, Brake shift interlock	10 A
19	Subwoofer amplifier / Smart amplifier	20 A
20	reserve	20 A
21	2017-2019: Extended power module	10 A
22	Horn relay	20 A
23	Instrument cluster / Steering wheel control unit	15 A
24	Datalink connector, Steering wheel control unit	15 A
25	Reserve	15 A
26	Push button start switch	5 A
27	Intelligent access (IA) module	20 A

Diagram

28	reserve	15 A
29	Radio, Global positioning system module (up to 2016)	20 A
30	Trailer tow relay for park lamps, Front park lamps, Front side markers	15 A
31	Trailer tow brake controller	5 A
32	Power window switches and motors, Power lock switches, Sunroof, 110V AC power outlet, Driver window/mirror switch, Rear seat switch (livery)	15 A
33	Suspension module	10 A
34	Rear heated seat module, Blind spot monitor, Rearview camera, Reverse sensing system, Auto high beam/Lane departure warning/Lane keep assist module, Interior mirror, Rear video camera	10 A
35	Climate control humidity sensor, Heads-up display, Overdrive cancel switch (limousine/livery)	5 A
36	Heated steering wheel	10 A
37	Refrigerator	10 A
38	Reserve	10 A
39	High beam headlamps	15 A
40	License plate lamps, Rear park lamps, Rear light bar applique	10 A
41	up to 2016: Restraints control module / Occupant classification system from 2017: Extended power module	7,5 A
42	reserve	5 A
43	reserve	10 A
44	reserve	10 A
45	reserve	5 A
46	Climate control system	10 A
47	Fog lamps and Fog lamp indicator	15 A
48	Circuit Breaker: reserve	30 A

Diagram

49 Delayed accessory relay, BCM relay